


SX-110

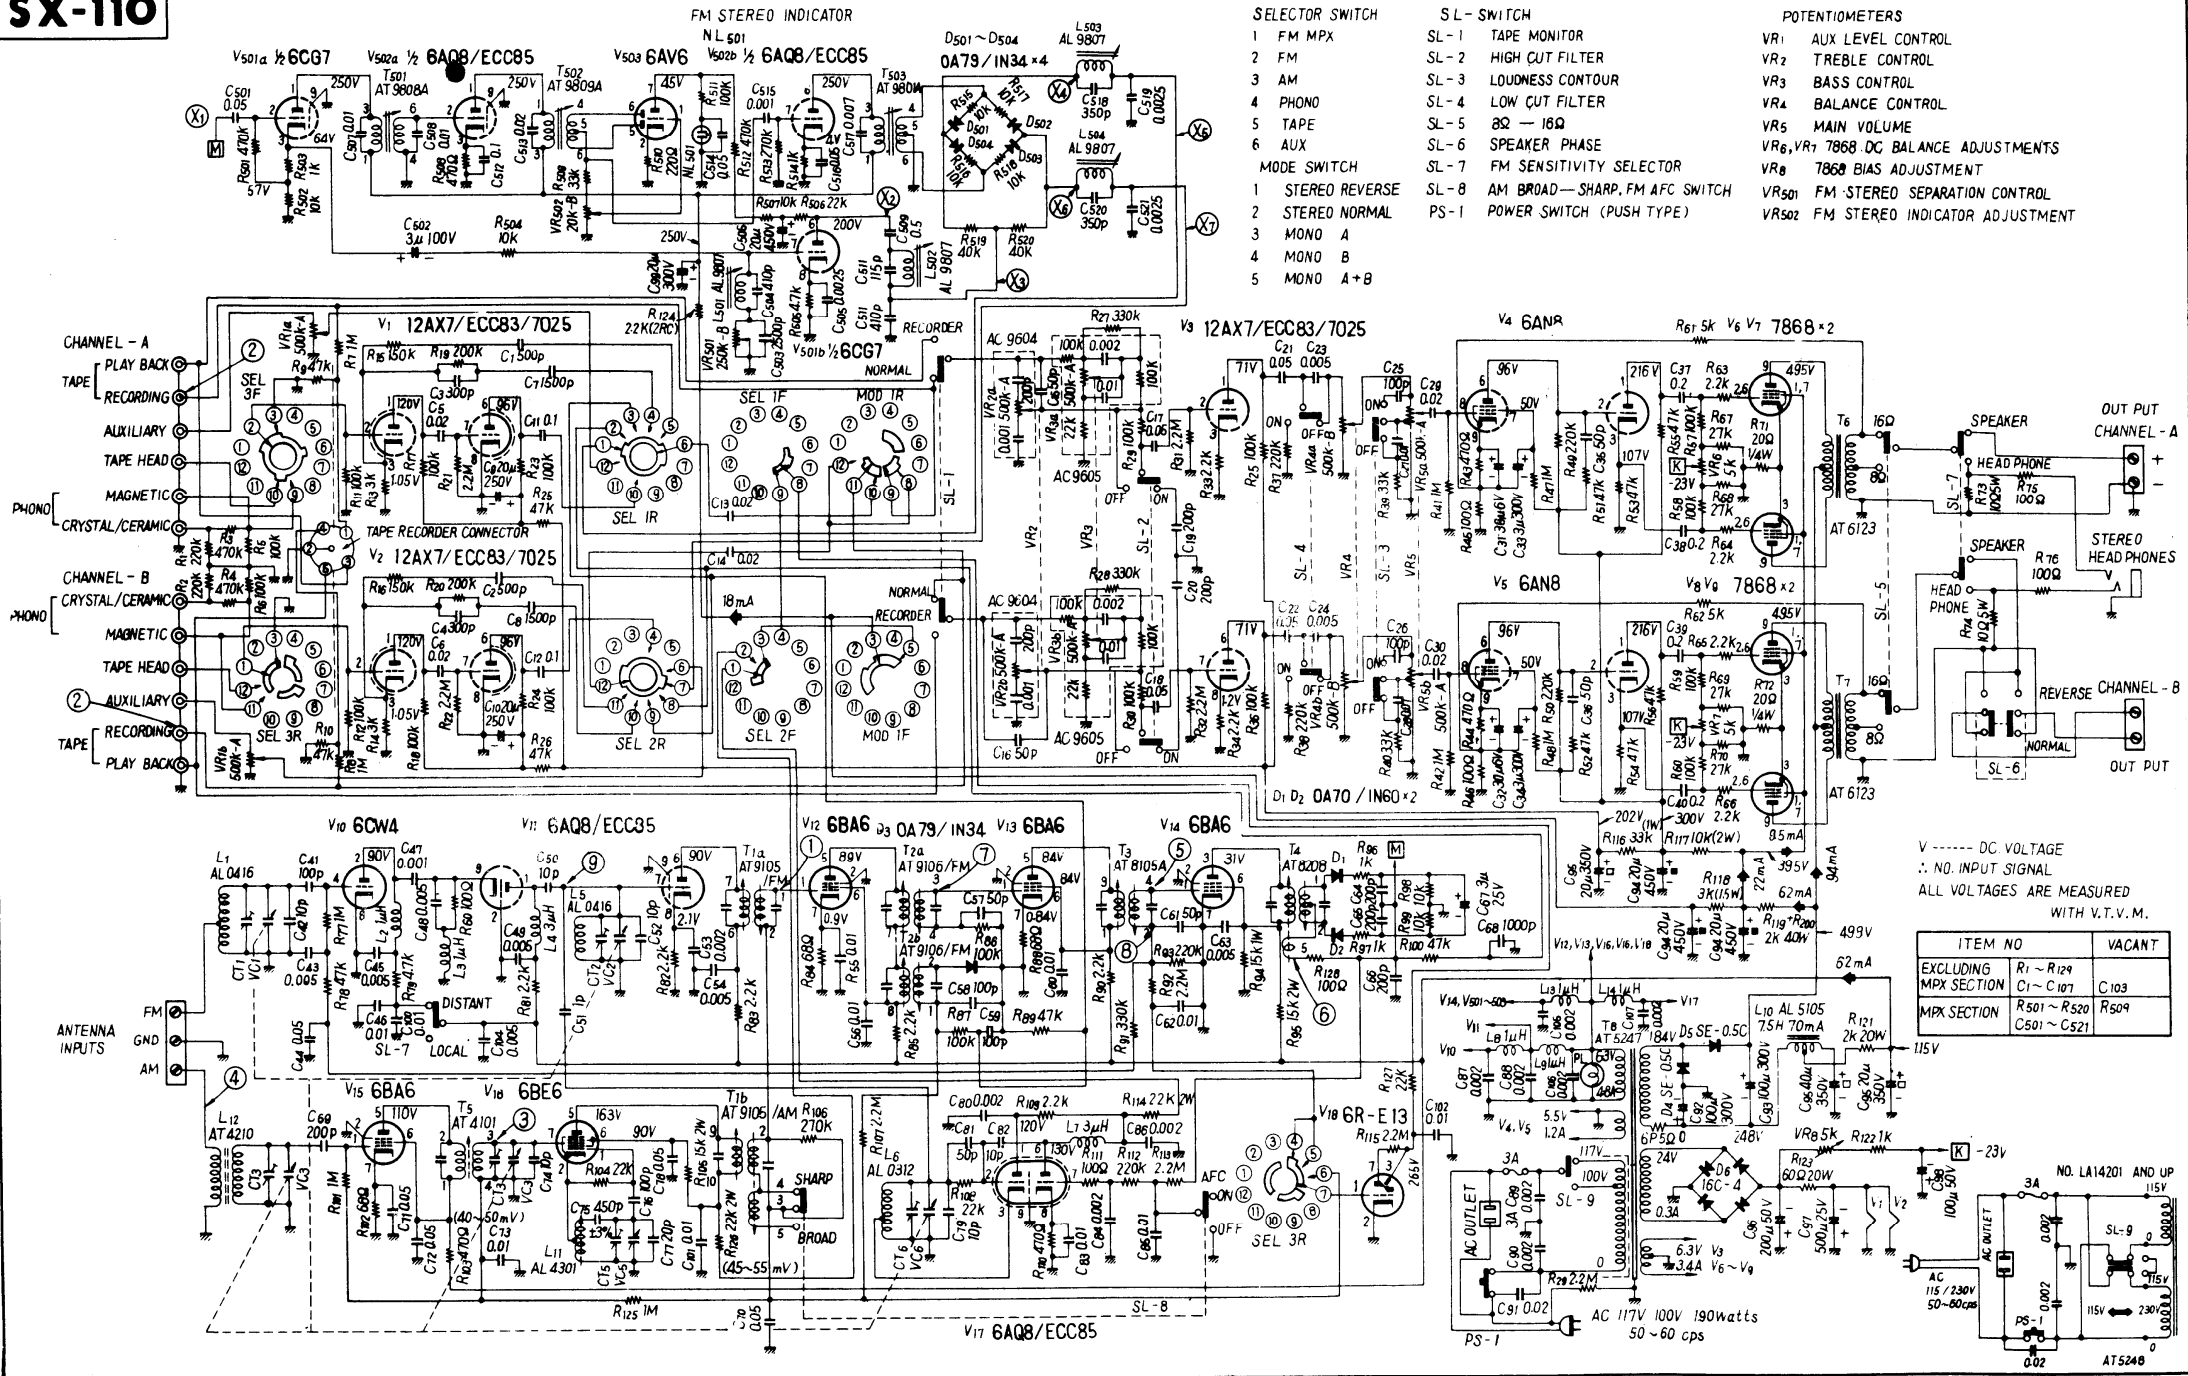

FM STEREO INDICATOR

SELECTOR SWITCH

SL - SWITCH

POTENTIOMETERS

- 1 FM MPX
 - 2 FM
 - 3 AM
 - 4 PHONO
 - 5 TAPE
 - 6 AUX
- MODE SWITCH
- 1 STEREO REVERSE
 - 2 STEREO NORMAL
 - 3 MONO A
 - 4 MONO B
 - 5 MONO A+B

- SL-1 TAPE MONITOR
- SL-2 HIGH CUT FILTER
- SL-3 LOUDNESS CONTOUR
- SL-4 LOW CUT FILTER
- SL-5 8Ω - 16Ω
- SL-6 SPEAKER PHASE
- SL-7 FM SENSITIVITY SELECTOR
- SL-8 AM BROAD—SHARP, FM AFC SWITCH
- PS-1 POWER SWITCH (PUSH TYPE)

- VR1 AUX LEVEL CONTROL
- VR2 TREBLE CONTROL
- VR3 BASS CONTROL
- VR4 BALANCE CONTROL
- VR5 MAIN VOLUME
- VR6, VR7 7868 DC BALANCE ADJUSTMENTS
- VR8 7868 BIAS ADJUSTMENT
- VR501 FM STEREO SEPARATION CONTROL
- VR502 FM STEREO INDICATOR ADJUSTMENT

V ---- DC VOLTAGE
 ∴ NO INPUT SIGNAL
 ALL VOLTAGES ARE MEASURED WITH V.T.V.M.

ITEM NO	VACANT
EXCLUDING MPX SECTION	R1 - R124
MPX SECTION	C1 - C107
	C103
	R501 - R520
	R509
	C501 - C521

